

Installing CyntrX LinX

02-2020


Record CyntrX serial number (SN) before installation
920.338.0479 for assistance



Required Components:

- CyntrX LinX tracking device
- CyntrX LinX cable (Cable 1) **OR** CyntrX OBDII Cable (Cable 2) **OR** CyntrX RP1226 Cable (Cable 3)

Parts List (list is referenced throughout guide):

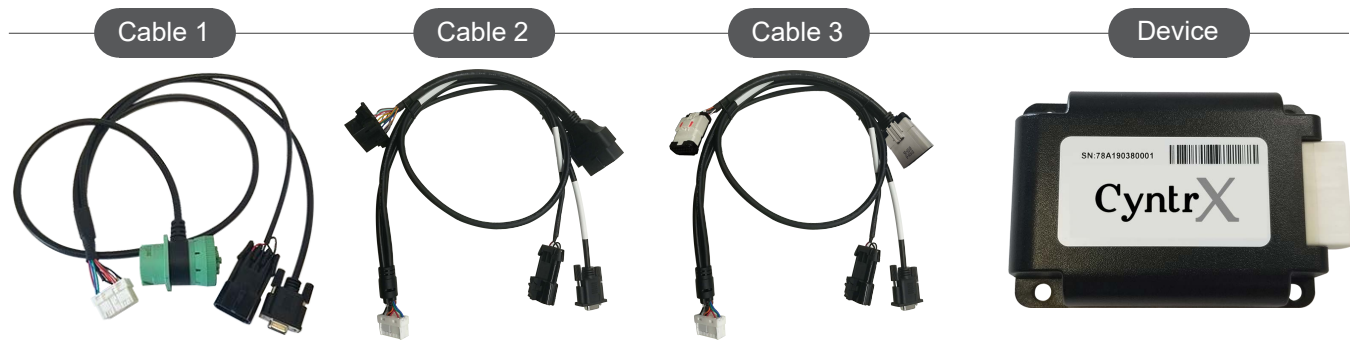

DEVICE NOTE:

Contains GSM/GPRS modem transmitter module. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: ALL PERSONS MUST KEEP A MINIMUM SEPERATION 20cm FROM THE TRANSMITTER'S ANTENNA WHEN DEVICE IS OPERATING TO MEET THE CURRENT FCC RF EXPOSURE GUIDELINES.



Step 1: Power Cable

- Locate the factory diagnostic port. Disconnect port from dash.
- Connect the male end of the power cable to the diagnostic port. **NOTE (FOR 9-PIN INSTALLATION ONLY):** After cable is attached, be sure to twist locking ring on power cable until it snaps in place. Factory screw holes may not match up to female end of power cable. A Universal Locking Ring has been provided to secure it to the factory port location if needed.
- Install the female end in the original factory port location.


NOTE: These connections are used for optional refrigeration monitoring, see our refrigeration guide if you have opted for this service.




9-Pin Installation (Cable 1)

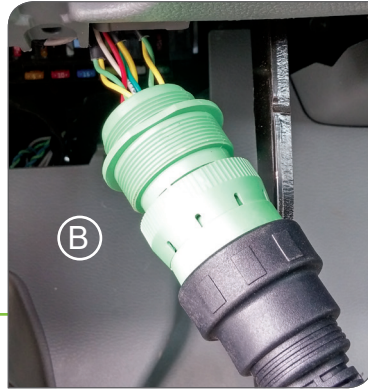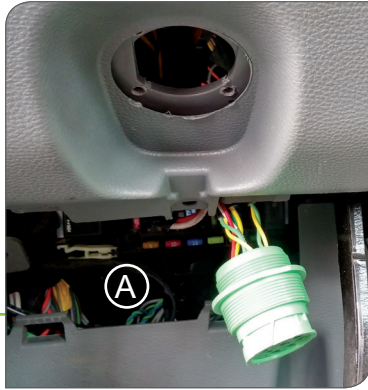

OBDII Installation (Cable 2)

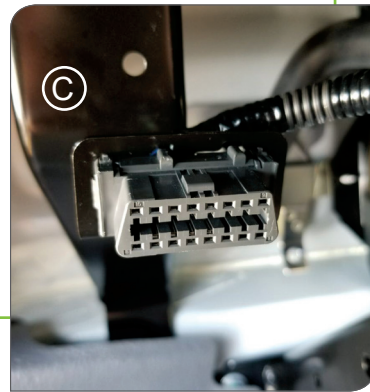

RP1226 (Cable 3)

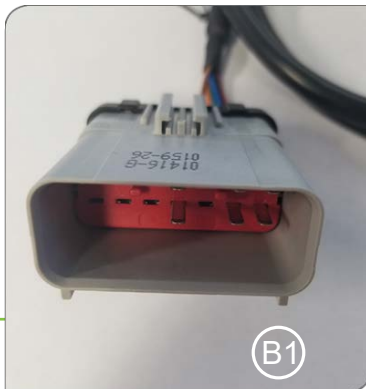

Step 2: Tracking Device

- A. Attach power cable to tracking device.
- B. Verify power has been supplied by watching for red LED to illuminate and start flashing. NOTE: LED will begin flashing green once device has locked onto GPS and Cellular.
- C. Installation supplies included: Velcro and tie wraps to secure device at install.
- D. **Make sure device is mounted horizontally inside the dash (closest to the windshield as possible) for optimal GPS reception. Avoid mounting near large bundles of wires.**
- E. Secure any hanging wires into the dash.
- F. Before completing the installation (putting dash back together), let truck idle for 5 minutes and call activation hotline to verify the location of the vehicle. **Have the CyntrX serial number (SN) available before calling 920-338-0479.**



ACTIVATION REQUIRED: Please call 920-338-0479 for activation.

SN: _____